Mounting Instruction for Luminaire *Elerina*

2nm
4x Screw M6x20

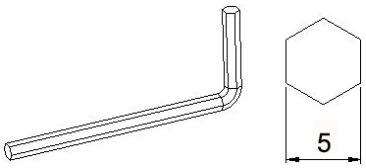

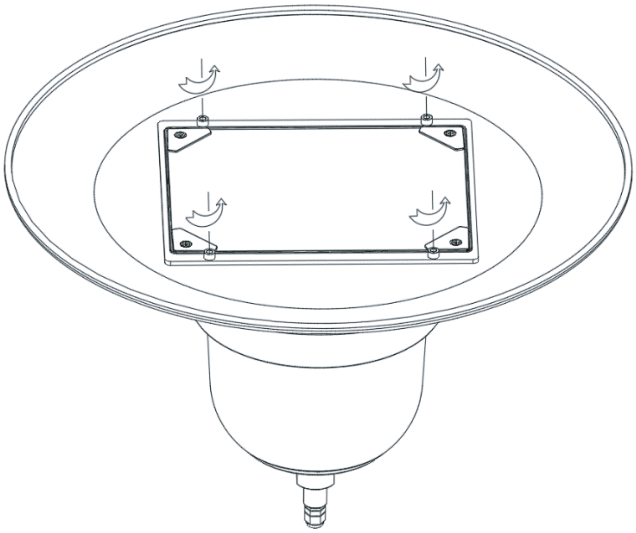

1. Loosen screws

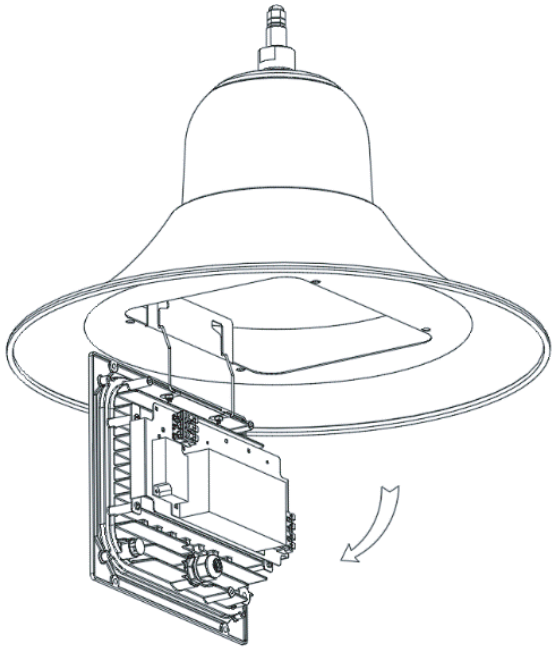

2. Release the LED module

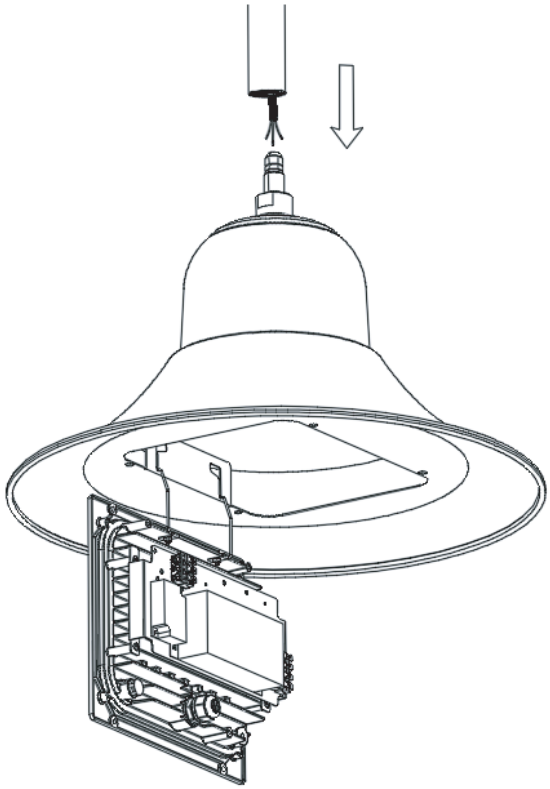

3. Put the cable through the gland

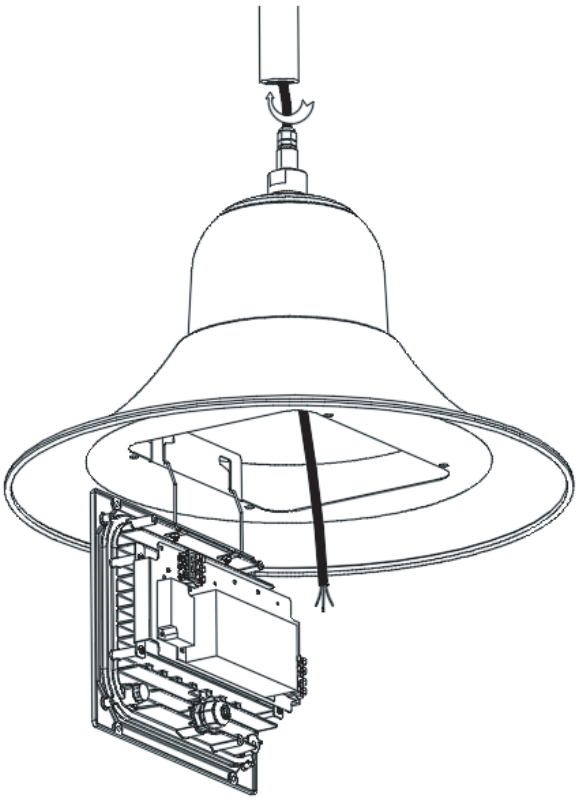

4. Lock the cap nut of gland

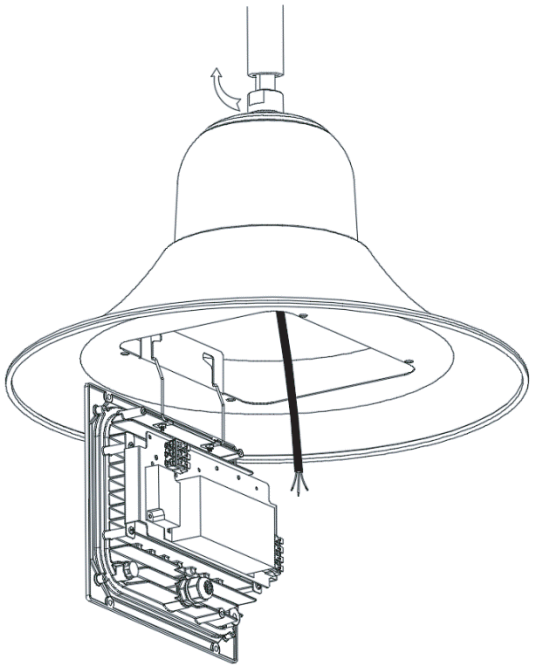

5. Lock the luminaire into the pole

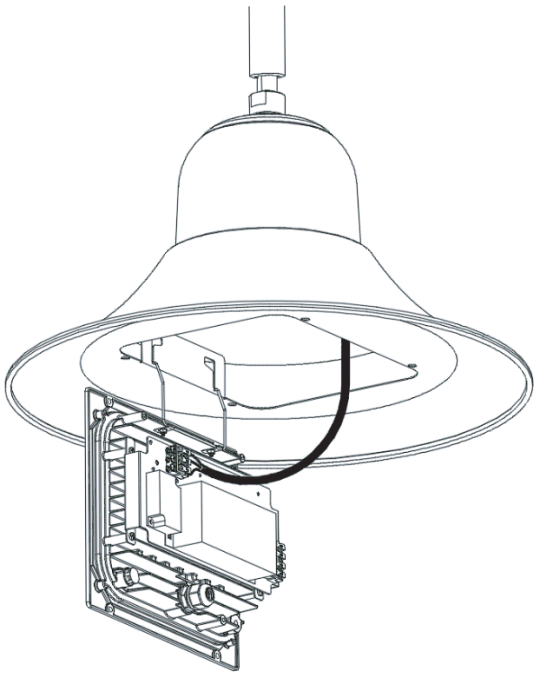

6. Connect the cable and adjust the orientation of the luminaire

2nm
4x Screw M6x20

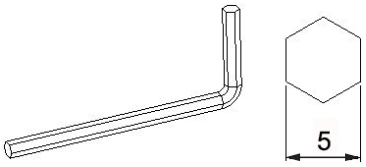

7. Lock the screws

CONPOWER Betrieb GmbH | Umstraße 6 | 47929 Grefrath
+49 2151 97155-70 | betrieb@conpower.de